



*be water, be Genebre*

## **БИМЕТАЛЛИЧЕСКИЙ ТЕРМОМЕТР**

**Артикул: 8031**

### **Технические характеристики**

Архангельск (8182)63-90-72  
Астана +7(7172)727-132  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04

Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

## ARTICULO: 8031

### Termómetro Bimetálico para tuberías (contacto posterior) Bimetal Thermometer for pipes (back contact)

#### Características

Termómetro bimetálico, con sujeción por resorte, para montar sobre tuberías.

- Carcasa orientable manualmente 360 grados.
- Visor de cristal.
- Apto para montar sobre tuberías en diámetros desde ½" hasta 2".
- Transmisión de la temperatura por contacto entre tubo y termómetro.
- Sin necesidad de conexión ni orificio en la tubería.
- Cambio de lugar en tuberías muy fácil de forma manual, sin herramientas y sin necesidad de despresurizar el proceso.
- Aguja indicadora, de aluminio, color negro.
- Dial de aluminio con marcas color negro y azul.
- Aro anillo de cierre de acero cromo plateado.

Aplicaciones varias para control de líquidos y gases en tuberías, diseñados para leer temperaturas con rapidez y precisión, en la mayoría de usos industriales.

Superficie de contacto con la tubería: Latón

Dimensiones de la caja: 63 mm

Material de la caja: Acero cromado.

Visor: cristal

Doble escala °C y °F

Precisión: ± 2,5 %.



#### Features

*Bimetallic thermometer attachable to the pipe by a spring.*

- *Adjustable body by rotation of 360 degrees.*
- *Sight Glass.*
- *Suitable for installing on pipes sizes from ½" to 2".*
- *The temperature is transmitted by contact between the pipe and the thermometer.*
- *No needed connection or hole in the pipe.*
- *Easy moving manually. No tools required. No need of pipe depressurizing.*
- *Black aluminum Pointer.*
- *Aluminum Dial with black and blue marks.*
- *Chrome-plated steel ring lock.*

*Multiple applications for control of liquids and gases in pipes, designed to read temperatures quickly and accurately, in most industrial applications.*

*Material in contact with the pipe: Brass*


*Box dimensions: 63 mm*

*Box material: Chrome steel.*

*Window: Glass*

*Double scale °C and °F*

*Accuracy: ± 2,5 %.*

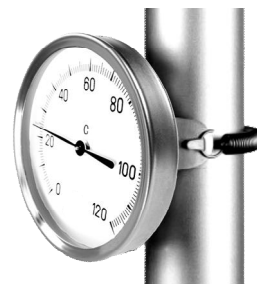

## DIVISIÓN ESCALA / SCALE DIVISION

Ref.	Escala / Range (°C)	Escala / Range (°F)	División escala / Scale Division °C	División escala / Scale Division °F
8031 060	0 / +60	32 / 140	1	2
8031 120	0 / +120	32 / 250	1	2
8031 206	-20 / +60	0 / 40	1	2
8031 404	-40 / +40	-40 / 100	1	2

The logo for Genebre, featuring the word "GENEBRE" in a bold, sans-serif font. The letter "G" is stylized with a blue horizontal bar extending from its top and bottom. The background of the logo area is a white rounded rectangle with a blue circular graphic element at the bottom right corner.

Архангельск (8182)63-90-72  
Астана +7(7172)727-132  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04

Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

Единый адрес для всех регионов: [grb@nt-rt.ru](mailto:grb@nt-rt.ru) || [www.genebre.nt-rt.ru](http://www.genebre.nt-rt.ru)